

Dynamic power analysis - capture more information

Complete test coverage - control system, power section, motor




Static



Like a Power Analyzer Instrument

- Numerics table mean value display
- Accuracy within 1% of a dedicated power analyzer
- Harmonic order calculations and vector displays

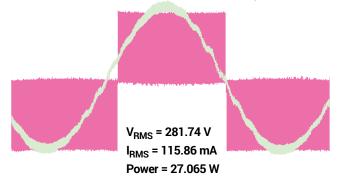


Dynamic



Complete


Capture More Information

- Long records for analysis (seconds to minutes of capture time)
- Per-cycle Waveforms reveal detailed dynamic behaviors
- Zoom+Gate easily localizes dynamic behaviors

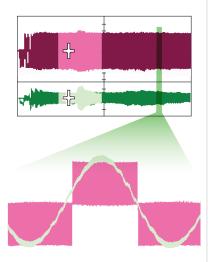


More Test Coverage

- Built on a high-bandwidth 12-bit oscilloscope platform
- Easily correlate control system, inverter subsection, and motor behaviors to a single switching cycle
- One instrument, one solution for motor drive engineers

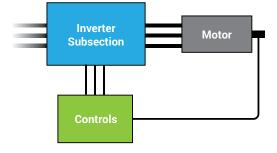



- Acquire any signal for short or long durations - everything on one display
- Perform 3-phase electrical and mechanical power calculations at your bench
- Correlate complex power, control, and motor behaviors

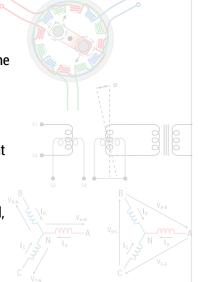


3-Phase Electrical and Mechanical Power and Control Analysis





WHAT MOTOR DRIVE ENGINEERS NEED



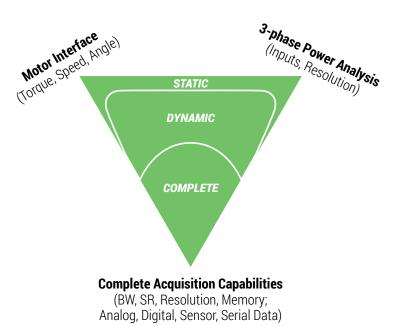

Motor drive engineers need to understand every part of drive system operation. They need to view control, sensor, device and power waveforms, they need to understand dynamic events, and they need flexibility to debug anything.

The Motor Drive Analyzer does it all.


- Up to 2 GHz, 10 GS/s, 5 Gpts with 12-bit resolution
- Dynamic power analysis, from startup to overload
- Per-cycle time-correlated power Waveforms
- Comprehensive motor interface (Torque, Speed, Angle, Power)
- Unique Zoom+Gate mode
- Two- and three-wattmeter methods supported
- Harmonics calculations, displays and filtering (optional)
- Vector displays (optional)
- Up to 6000 Vrms isolation with HVD Series differential probes
- Easily interface many different current measurement devices

Static power analysis

The mean-value Numerics table displays voltage, current, power, speed, torque, etc. values for short (or long) time periods during constant load, speed and torque operating conditions - just like what a dedicated power analyzer instrument provides.

Dynamic power analysis

Capture thousands of power cycles over long time periods. Per-cycle Waveform displays help you understand dynamic behaviors. Use Zoom+Gate to isolate and correlate power behaviors to control system operation during dynamic load, speed and torque operating conditions.

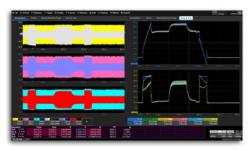

Complete test coverage

Acquire and display analog, digital, sensor and serial data signals from both power and embedded control systems. Correlate power system behaviors to control system activity during time periods as short as a single device switching cycle.






Motor Drive Analyzer complete test coverage


The Motor Drive Analyzer acquires any analog, digital, sensor, serial data or power signal and performs three-phase electrical and mechanical power calculations. It has the flexibility to acquire and measure almost anything.

In contrast, single-function power analyzers only provide simple "black-box" numerical analysis during static operating conditions. Most oscilloscopes are good for basic embedded control debug and validation, but they lack enough inputs for complex drive system and control system analysis, and don't have enough resolution to precisely measure power and efficiency values.


Typical Power Analyzer Test Coverage

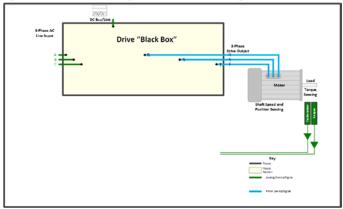

Typical Oscilloscope Test Coverage

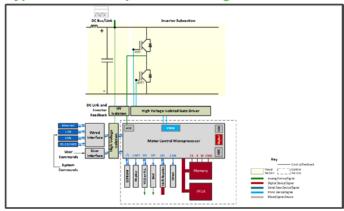

Teledyne LeCroy Motor Drive Analyzer Test Coverage

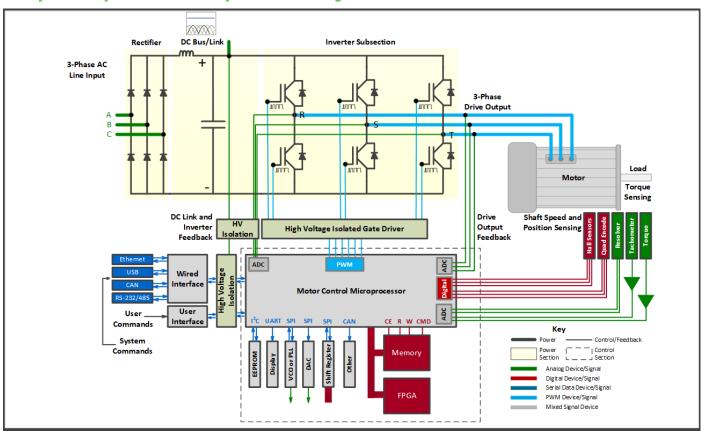



The Motor Drive Analyzer tells you more about your motor, drive and controls than anything else. It's what you wanted and didn't know to ask for.

1. Zoom+Gate Mode

Zoom in to gate the results to a region in a long acquisition. Updates instantly. See page 9.

2. Comprehensive Mechanical Interface

Supports nearly every sensor type. Derive speed/torque without sensors. See page 10.

3. Numerics Table

See the mean values for the entire acquisition in a user-defined table. See page 8.

4. Vertical Zooming

Capture details through independent vertical zoom of waveforms.


5. Precise Harmonic Filtering

Limit results to Fundamental only, Fundamental + N, or Range. (some optional).

6. Flexible, Intuitive, Graphical Setup

Gain confidence using a graphic interface with re-calculation upon setup changes.



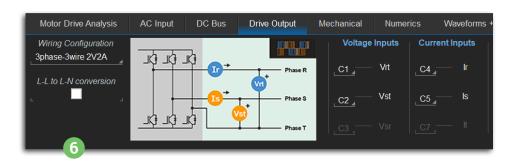







7. Q-Scape Multi-tabbed Displays

Organize waveforms onto separate tabs, then view them all at once or one tab at a time.

8. Multi-stage Efficiency Analysis

Calculate stage-stage and overall (cumulative) efficiency.

9. Connect Two MDAs (for 16 Channels)

Use OscilloSYNC™ to quickly connect two MDAs and create one 16-channel MDA.

10. Per-cycle Waveform Displays

Touch the Numerics table to create a plot of the measurement versus time.

Cursors

Place a cursor on any waveform and get an instantaneous reading of drive behavior.

Statistics Table


Displays complete statistical data for any Numerics table measurement.

Vector Displays

View the 3-phase system through an intuitive, six vector display (optional). See page 8.

Harmonic Calculations

Display harmonic values in a table, with spectral waveforms and THD per-cycle Waveforms (optional). See page 8.

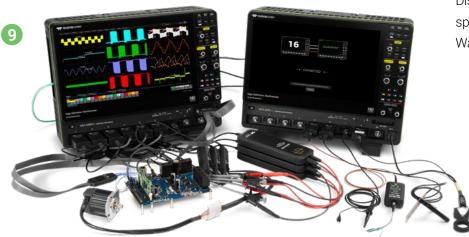




Numerics Measurement Table

- User-configurable up to 120 values in 10 (source) rows and 12 (measurement) columns.
- Mean value summaries of per-cycle calculations.
- Select for Full Spectrum or Fundamental Only calculations (other selections optional).



Quickly select the measurement sources and types to display in a mean-value Numerics table.

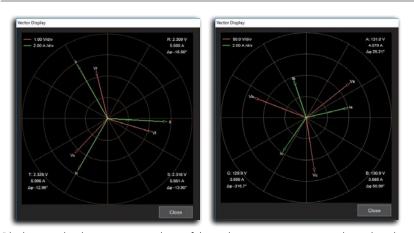

Display two simultaneous vector views of three-phase power systems and correlate them to acquired voltage, current and other waveforms and calculated per-cycle Waveforms.

Vector Displays (Optional)

- Display of AC Input and Drive Output vector system.
- Two simultaneous displays.
- Display vectors and numeric data as arithmetic mean or vector average.
- Harmonically filter to the fundamental, a range of harmonics, or a single harmonic and display vectors.
- Use with Zoom+Gate to show vector changes during dynamic or long acquisitions.



Capture and calculate harmonics during very short or long acquisitions and show results as Spectral Waveform displays, total THD values or per-cycle THD Waveforms.

Harmonics Calculations (Optional)


- Rigorous software DFT method precisely separates desired frequency content.
- Calculates AC line-side (fixed-frequency) or inverter/drive output (variable-frequency).
- Adds "Fundamental + N" and "Range" selections to Harmonic Filter settings.
- THD numeric calculation and per-cycle Waveforms.
- Harmonic order table and spectral displays (up to nine simultaneous).



This simplified example shows THD for voltage and current (bottom magenta and orange Waveforms) plotted over time with one THD value per power cycle.

Per-cycle Waveforms


- Displays measured behaviors as value vs. time Waveforms, with one value per measurement cycle.
- Simple setup touch a Numerics table value and a per-cycle Waveform is displayed.
- Time-correlated to other acquired signals measured anomalies or unexpected changes are quickly revealed.
- Display complete statistics of all values.

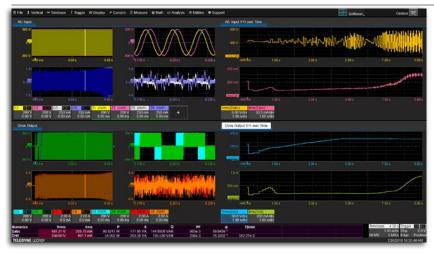

Capture voltage, current and other signals and calculate dynamic responses using per-cycle Waveforms to better understand complex drive, control and motor behaviors.

Dynamic Drive Response

- Capable of thousands of dynamic power cycle measurements.
- Minutes of acquisition time (e.g., 2.5 GS of memory at 10 MS/s sample rate = over 4 minutes).
- Complete understanding of drive system behaviors – startup, load application/release, etc.
- Correlate drive response problems to control system instructions or power section failures.

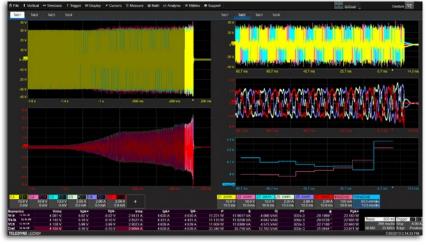


Take very long acquisitions, calculate values for the complete data set, then Zoom+Gate to get a Waveform and Numerics view of just the zoomed area.

Zoom+Gate Mode

- One touch creates Zoom waveforms and "gates" the Numeric measurements to the zoomed area.
- Per-cycle Waveforms are time-correlated to Zooms for easy problem investigation.
- Change zoom location and all Numerics and Waveforms instantly update.
- Gain fast and deep insight into dynamic drive and control system behaviors.

COMPREHENSIVE MECHANICAL INTERFACE




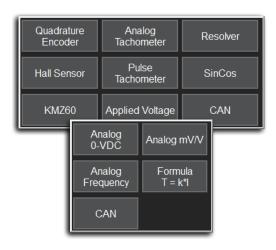

14 different methods to calculate speed, angle and torque - most supported only by the Motor Drive Analyzer.

Unrivaled Speed and Torque Interface


- Nine speed, four angle and five torque calculations or sensors supported.
- Calculate mechanical power at your bench without external sensors connected.
- Infer torque from phase current measurement and torque constant.
- Infer speed from stator frequency.
- Angle Tracking Observer filter capability to emulate control system operation.
- Display calculated speed, torque and angle values as per-cycle Waveforms.

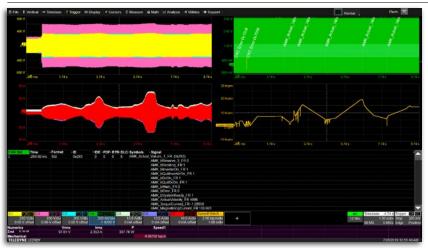

Speed data is extracted from digital CAN-encoded serial data and plotted as an analog speed per-cycle Waveform, as if the signal was directly probed.

Digital Speed/Torque Sensor Support


- Quadrature encoder, BLDC Hall sensor and Pulse Tachometer support.
- Use digital inputs to capture digital sensor signals, preserving analog channels for other use.
- Extract speed and torque information from serial data signals (optional with serial data TDME packages).

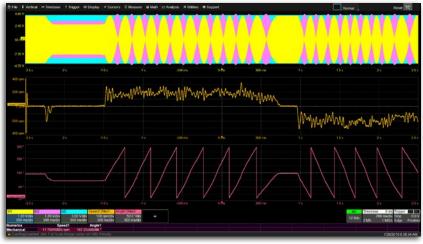

Speed and angle are calculated from the analog sine, cosine and excitation frequency signals of a resolver, with user-defined angle tracking observer applied.

Complex Speed Sensor Support

- SinCos, Resolver and KMZ60 sensor support.
- Calculate instantaneous motor shaft angle values.
- Correct motor shaft angle to rotor magnetic field angle.
- Apply Angle Tracking Observer filter to better correlate to control system operation.

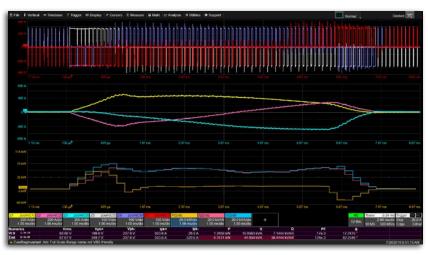

Power is measured and shown as per-cycle Waveforms for each instantaneous device switching cycle to determine operation during rotor flux changing commands.

Calculate Power During Very Short Durations

- Use short duration periods (e.g., device switching cycles, QEI pulse periods) for power calculations.
- Easily validate instantaneous drive system response time to control system changes (e.g., Vector FOC, DB-DTFC).
- Perform spectral analysis of calculated power, speed, torque, etc. values with high frequency resolution.



Drive control and feedback signals are compared to drive output voltage and current and calculated power Waveforms to understand whether motor reversal is performing correctly.

Correlate Power Section and Control System Behaviors

- View analog, digital or serial data control signals time-correlated with power section behaviors.
- Compare control system calculated or measured response to actual drive and motor behaviors.
- Calculate and view power section behaviors as per-cycle Waveforms for a more intuitive understanding of flaws and defects.



Measured losses are compared to drive control system estimated losses and further calculations are made to separate measured losses into core (iron) and load (copper) losses.

Complex Measurements and Math

- Perform real-time updated measurements on live acquisitions for faster debug and optimization.
- Calculate and plot losses from measured data and motor constants.
- Perform math on calculated numeric values using additional constants to derive additional results.
- Derive winding balance for complex systems.

CAPABILITIES AND PERFORMANCE



Setup Capability			
Measurement Locations	AC Input, DC Bus (Link), Drive Output, Mechanical Output		
Wiring Configurations	AC Input: 1-phase / 2-wire (1V1A); 1-phase / 3-wire (2V/2A); 3-phase / 3-wire (2V2A); 3-phase / 3-wire (3V3A); 3-phase / 4-wire (3V3A); None		
	DC Bus: 1-phase / 2-wire (1V1A); None Drive Output: 1-phase / Half-Bridge (1V1A); 1-phase / Full-Bridge (1V1A); 3-phase / 3-wire (2V2A); 3-phase / 3-wire		
Harmonic Filter	(3V3A); 3-phase / 4-wire (3V3A); None Select either Full Spectrum or Fundamental only. With WR8kHD-THREEPHASEHARMONICS option, also select Fundamental + N (harmonics) or Range (maximum 50th harmonic in both cases).		
Sync (per-cycle) Measurement Signal			
Voltage Measurement Method	Line-Line or Line-Neutral (with L-L to L-N conversion supported)		
Calculation Waveform Sources	Any input channel or stored memory trace		
Numerics Measurement Table Se	elections (calculated per cycle, mean value displayed)		
Voltage	RMS voltage, AC Voltage, DC Voltage, Peak Positive Voltage, Peak Negative Voltage, Peak-Peak Voltage, Voltage Crest Factor, Voltage Total Harmonic Distortion (THD) (with the WR8kHD-THREEPHASEHARMONICS option)		
Current	RMS Current, AC Current, DC Current, Peak Positive Current, Peak Negative Current, Peak-Peak Current, Current Crest Factor, Current Total Harmonic Distortion (THD) (with the WR8kHD-THREEPHASEHARMONICS option)		
Power, Efficiency and Other	Real, Apparent and Reactive Power, Peak Positive Real Power, Peak Negative Real Power, Power Total Harmonic Distortion (THD) (with the WR8kHD-THREEPHASEHARMONICS option), Power Factor, Phase Angle, Incremental Efficiency, Total Efficiency, Frequency		
Motor Mechanical	Torque, Speed1, Speed2, Angle1, Angle2 (as defined by sensor or adjusted with Offset Angle setting), Mechanical Power, AC induction motor Slip		
Source Selections	Voltage: Va, Vb, Vc, Va-b, Vb-c, Vc-a, Vr, Vs, Vt, Vr-s, Vs-t, Vt-r, Ia, Ib, Ic, Ir, Is, It, Vbus, Ibus, Mechanical. Up to 10 rows (sources) and 12 columns (measurements) may be displayed in the table at any time. Source selections dependent on Wiring Configuration selections and Line-Line to Line-Neutral selections.		
Per-cycle Waveforms and Statist	tics		
Waveforms	A time-correlated waveform of any per-cycle Numerics Table measurement parameter may be created and displayed anywhere on the grid. Up to 12 detailed per-cycle Waveforms may be displayed at one time, with up to 40 waveforms total (channels, memories, zooms, math and per-cycle Waveforms) displayed at any one time.		
Statistics	Detailed statistics on up to 12 per-cycle Numerics Table measurement parameters may be displayed at one time.		
Zoom+Gate Mode			
Operation	Zoom+Gate creates zooms of all voltage, current and mechanical signals (analog or digital) and simultaneously gates the Numerics and Statistics tables to the zoomed area. Displayed per-cycle Waveforms are simultaneously time-correlated to the zoomed area. Scroll through the full acquisition using zoom position and ratio (size) controls and view instantaneous updates of table values.		
Motor Mechanical Interface			
Speed + Direction	Analog Tachometer (0-x Vdc = Speed). Source is analog input.		
	Digital Tachometer (x pulse/revolution = speed). Source may be digital or analog input.		
	Applied Voltage. Source is one analog input.		
	Controlled Area Network (CAN) Serial Data. Source is CAN message with embedded digital data. CANbus TD or		
	TDME option must be ordered separately.		
	Hall Sensors (three digital inputs). Source may be digital or analog input. Angle Tracking Observer filter may be applied to this selection.		
Speed + Direction + Angle	Resolver. Source is three analog inputs.		
	SinCos. Source is two analog inputs.		
	KMZ60. Source is two analog inputs.		
	Quadrature Encoder Interface (QEI) (A, B and optional Z input). Source may be digital or analog input. Angle Tracking Observer filter may be applied to all selections.		
Torque	Analog 0-Vdc = Torque. Source is one analog input.		
101400	Analog mV/V = Torque. Source is one analog input.		
	Analog Frequency Modulated = Torque. Source is one analog input.		
	Motor Constant K * Current = Torque. Source is MDA calculated per-cycle current value.		
	Controlled Area Network (CAN) Serial Data = Torque. Source is CAN message with embedded digital data. CANbus TDME option must be ordered separately.		
Typical Accuracy			
Voltage, Current and Power	Accuracy is typically within 1%, depending on voltage and current measurement device.		
	Recommended voltage probe (line-line voltage sensing): Teledyne LeCroy HVD Series High Voltage Differential Probe (1 kV, 2 kV and 6 kV isolated models available).		
	Recommended voltage probe (line-neutral or line-reference voltage sensing): Teledyne LeCroy HVD Series HV Differential Probe for voltages >50Vrms, Teledyne LeCroy passive probe (Qty. 4 included) for voltages ≤50 Vrms		
	Recommended current probes: Teledyne LeCroy CP Series Current Probes.		
	Other voltage and current measurement devices may be interfaced to the oscilloscope and analysis software using built-in rescaling and unit selection capabilities. The CA10 current sensor adapter provides programmability for rescaling and unit selection.		



Harmonics Calculation Option (part number WR8KHD-THREEPHASEHARMONICS)						
Fundamental Frequency Detection	Fixed Frequency detection mode (for Line AC inputs only) or Varying Frequency detection mode (for Line AC inputs or Inverter PWM outputs).					
Number of Harmonics Calculated	Up to 100 (Fixed Frequency) or up to 50 (Varying Frequency)					
Harmonics Table and Spectral Wave- form Display	Values by Harmonic Order for up to nine quantities (Voltage, Current and Power) for any or all of three phases (limited to Voltage and Current in Fixed Frequency mode).					
Units/Limits Selection	Amps/Volts/Watts, % or dB.					
	For Fixed Frequency, pre-defined limits file or custom limits file.					
Vector Display Option (expected a	availability early 2020)					
Number of Vector Displays	Two: one for AC Input and one for Drive Output					
Vector Display Selection	Arithmetic or Vector Sum					
Display Information	Volts, Amps and Phase Angle for each vector					
Other Available Options & Accessories						
Acquisition Memory	Options available for up to 1.25 Gpts/Ch on all 8 channels (up to 5 Gpts/Ch interleaved)					
OscilloSYNC™ Technology (16ch)	Combine two MDAs into a single, 16-channel acquisition system. OscilloSYNC option enables the display and con-					
3, \ ,	trol of 16 time-synchronized channels on one MDA after making a simple BNC and Ethernet connection between					
	two instruments					

trol of 16 time-synchronized channels on one MDA after making a simple BNC and Ethernet connection between two instruments.

Mixed Signal Oscilloscope

WR8KHD-MSO: 16 digital input capability. Up to 500 MHz digital clock rate, flexible analog and digital cross-pattern trigger and use of digital logic lines for mechanical speed sensing and serial data clock, data and chip select probing. Optional serial data trigger and decode software available.

Serial Triggers, Decode,

Measure/Graph and Eye Diagram

DigRFv4, DPHY, ENET, I3C, Manchester, MDIO, MIL1553, NRZ, SENT, SpaceWire, SPMI, USB2, USB2-HSIC, and 8b/10b. Symbolic triggering and decoding is available for CAN and CAN FD.

TDME options provide automatic serial message timing measurements, serial (digital) data extraction and conversion (D-A capability), and eye diagrams.

Probes and Accessories

A comprehensive list of voltage and current probes is supported on the Motor Drive Analyzer. Additionally, rack-

Probes and Accessories

A comprehensive list of voltage and current probes is supported on the Motor Drive Analyzer. Additionally, rackmounts, carts, cases, additional removable drives, GPIB interface and CPU RAM upgrades are also available.

Other Application Software Packages

Power (Semiconductor Device and Switch-mode Power Supply) Analysis, Digital Filtering, Clock+Timing Jitter, Serial Data Compliance Spectrum Analysis, EMC/EMI Measurements, and Developer's Toolkit

Data Jitter, Serial Data Compliance, Spectrum Analysis, EMC/EMI Measurements, and Developer's Toolkit.

Teledyne LeCroy offers 4- and 8-channel High Definition Oscilloscopes that support some of the same capabilities as the Motor Drive Analyzer when purchased with the THREEPHASEPOWER software option.

	THREEPHASEPOWER on HD06000A & WavePro HD	THREEPHASEPOWER on WaveRunner 8000HD	MDA 8000HD Motor Drive Analyzer

Analog Input Channels	4	8 (16 with OscilloSYNC)	8 (16 with OscilloSYNC)
Digital Input Channels	16 (on -MS models)	16 (with MSO option)	16 (with MSO option)
Resolution	12 bits	12 bits	12 bits
Bandwidth	350 MHz - 8 GHz	350 MHz - 2 GHz	350 MHz - 2 GHz
1-Phase Power Analysis	✓	✓	✓
3-Phase Power Analysis	(2-wattmeter method only)	✓	✓
Mechanical Power Analysis	X	X	✓
X-Y Traces	Х	Х	✓
Harmonics Calc Option	✓	✓	✓
Vector Display Option	✓	✓	✓

ORDERING INFORMATION



WR8vKHD-USB2-HSICBUS D

ONDENING INFORMATION			4096
Product Description	Product Code	Product Description	Product Code
MDA 8000HD Motor Drive Analyzers		Serial Trigger and Decode Op	otions
350 MHz, 8 Ch, 12 Bits, 10 GS/s, 50 Mpts/Ch	MDA 8038HD	MIL-STD-1553 Trigger & Decode	WR8KHD-1553 TD
Motor Drive Analyzer with 15.6" 1920x1080		MIL-STD-1553 Trigger, Decode,	WR8KHD-1553 TDME
capacitive touch screen and UHD (4k) extended		Measure/Graph & Eye Diagram	WEST IN OUT OF THE
desktop. Includes 3-phase Electrical and		8b10b Decode	WR8KHD-8B10B D
Mechanical Power Analysis Software.	1404 0050110	ARINC 429 Symbolic Decode ARINC 429 Symbolic Decode,	WR8KHD-ARINC429BUS D SYMBOLIC
500 MHz, 8 Ch, 12 Bits, 10 GS/s, 50 Mpts/Ch	MDA 8058HD	Measure/Graph &Eye Diagram	WR8KHD-ARINC429BUS DME SYMBOLIC
Motor Drive Analyzer with 15.6" 1920x1080		AudioBus Trigger & Decode	WR8KHD-AUDIOBUS TD
capacitive touch screen and UHD (4k) extended desktop. Includes 3-phase Electrical and		AudioBus Trigger, Decode & Grap	
Mechanical Power Analysis Software.		CAN FD Trigger & Decode	WR8KHD-CAN FDBUS TD
1 GHz, 8 Ch, 12 Bits, 10 GS/s, 50 Mpts/Ch Motor	MDA 8108HD	CAN FD Trigger, Decode,	WR8KHD-CAN FDBUS TDME
Drive Analyzer with 15.6" 1920x1080 capacitive	WIDT TO TOOT ID	Measure/Graph & Eye Diagram	
touch screen and UHD (4k) extended desktop.		CAN FD Symbolic Trigger,	WR8KHD-CAN FDBUS TDME SYMBOLIC
Includes 3-phase Electrical and Mechanical Power		Decode, Measure/Graph,	
Analysis Software.		& Eye Diagram	WDOW ID CAMBLIC TO
2 GHz, 8 Ch, 12 Bits, 10 GS/s, 50 Mpts/Ch Motor	MDA 8208HD	CAN Trigger & Decode CAN Trigger, Decode,	WR8KHD-CANBUS TD WR8KHD-CANBUS TDME
Drive Analyzer with 15.6" 1920x1080 capacitive		Measure/Graph & Eye Diagram	WR8KHD-CANBOS IDIVIE
touch screen and UHD (4k) extended desktop.		CAN Symbolic Trigger, Decode,	WR8KHD-CANBUS TDME SYMBOLIC
Includes 3-phase Electrical and Mechanical Power		Measure/Graph & Eye Diagram	WHORID CANDOS IDMESTIMBOLIO
Analysis Software.		DigRF 3G Decode	WR8KHD-DIGRF3GBUS D
,		DigRF V4 Decode	WR8KHD-DIGRFV4BUS D
Included with Standard Configurations		MIPI D-PHY CSI-2 & DSI Decode	WR8KHD-DPHYBUS D
÷10, 500 MHz Passive Probe (Qty. 4), Protective Cover, Gettin	ng Started	Embedded Bundle: I2C, SPI, UAR	
Guide, MDA Software Instruction Manual, Microsoft Windows		Trigger & Decode	
Commercial NIST Traceable Calibration with Certificate, Pow	er Cable for	Embedded Bundle: I2C, SPI, UAR	
the Destination Country, 3-year Warranty		Trigger, Decode, Measure/Graph,	
		& Eye Diagram	WDOW ID ENETDLIC D
Motor Drive Analyzer Power Analysis Options		ENET Decode FlexRay Trigger & Decode	WR8KHD-ENETBUS D WR8KHD-FLEXRAYBUS TD
3-phase Harmonics Calculation WR8KHD-THREEPHAS	EHARMONICS	FlexRay Trigger, Decode,	WR8KHD-FLEXRAYBUS TDMP
Option		Measure/Graph & Physical Layer	
Vector Analysis Option (Availab	ole early 2020)	I2C Trigger & Decode	WR8KHD-I2CBUS TD
		I2C Trigger, Decode,	WR8KHD-I2CBUS TDME
Memory Upgrade Options		Measure/Graph & Eye Diagram	
	BKHD-500MPT	I3C Trigger & Decode	WR8KHD-I3CBUS TD
	KHD-1000MPT	I3C Trigger, Decode,	WR8KHD-I3CBUS TDME
	(HD-2000MPT	Measure/Graph & Eye Diagram	WD0W ID LINDIO TO
5 Gpt/2Ch (2.5 Gpt/4Ch, 1.25 Gpt/8Ch) WR8k	KHD-5000MPT	LIN Trigger & Decode LIN Trigger, Decode,	WR8KHD-LINBUS TD WR8KHD-LINBUS TDME
CPU, Computer and Other Hardware Options		Measure/Graph & Eye Diagram	WROKHD-LINBUS IDIVIE
	KHD-RSSD-02	Manchester Decode	WR8KHD-MANCHESTERBUS D
	IPG-32GBRAM	MDIO Decode	WR8KHD-MDIOBUS D
10 GB to 32 GB CPO NAIN Opyrade" Whokhb-c	IPG-32GDNAIVI	NRZ Decode	WR8KHD-NRZBUS D
* 32 GB RAM upgrade is included with all memory upgrade o	ptions.	SENT Trigger & Decode	WR8KHD-SENTBUS TD
, , , ,		SENT Trigger, Decode,	WR8KHD-SENTBUS TDME
Oscilloscope Synchronization Options		Measure/Graph & Eye Diagram	
	-16CH-SYNCH	SpaceWire Decode	WR8KHD-SPACEWIREBUS D
two WaveRunner/MDA 8000HD oscilloscopes)		SPI Trigger & Decode	WR8KHD-SPIBUS TD
		SPI Trigger, Decode,	WR8KHD-SPIBUS TDME
Mixed Signal Solutions		Measure/Graph & Eye Diagram	THE SHARE SELECTION OF THE SHARE TO
	WR8KHD-MS0	SPMI Trigger & Decode	WR8KHD-SPMIBUS TD
22 extra large gripper probes, 20 ground extenders,		SPMI Trigger, Decode, Measure/Graph & Eye Diagram	WR8KHD-SPMIBUS TDME
5 flexible ground leads and license)		UART-RS232 Trigger & Decode	WR8KHD-UART-RS232BUS TD
	MSO-LICENSE	UART-RS232 Trigger, Decode,	WR8KHD-UART-RS232BUS TDME
11101110	22 - 32, 102	Measure/Graph & Eye Diagram	WHORED CART HOZOZDOG FDIVIL
		USB 2.0 Trigger & Decode	WR8KHD-USB2BUS TD
		USB 2.0 Trigger, Decode,	WR8KHD-USB2BUS TDME
		Measure/Graph & Eye Diagram	
		USB 2.0 HSIC Decode	WR8vKHD-LISB2-HSICBLIS D

USB 2.0 HSIC Decode

ORDERING INFORMATION



			4090
Product Description	Product Code	Product Description	Product Code
Serial Data Compliance Test Options		Probes	
QualiPHY 1000Base-T1 Compliance Software QualiPHY BroadR-Reach Software	QPHY-1000BASE-T1* QPHY-BROADR-REACH*	Power/Voltage Rail Probe with 4 GHz bandwidth, 1.2x attenuation, ±30 V offset, ±800 mV	RP4030
QualiPHY Ethernet 10/100/1000BT Software	QPHY-ENET*	High Voltage Fiber Optic Probe, 60 MHz bandwidth	HVF0103
QualiPHY MOST150 Software	QPHY-MOST150	500 MHz Passive Probe, 2.5mm, 10:1, 10 MΩ	PP021
QualiPHY MOST50 Software	QPHY-MOST50	500 MHz Passive Probe, 5mm, 10:1, 10 MΩ	PP025
QualiPHY USB 2.0 Software	QPHY-USB‡	1 GHz, 0.9 pF, 1 M Ω High Impedance Active Probe	ZS1000
10/100/1000Base-T Ethernet Test Fixture	TF-ENET-B**	Set of 4 ZS1000 Active Probes	ZS1000-QUADPAK
USB 2.0 Compliance Test Fixture	TF-USB-B	1.5 GHz, 0.9 pF, 1 M Ω High Impedance Active Probe	ZS1500
•		Set of 4 ZS1500 Active Probes	ZS1500-QUADPAK
* TF-ENET-B required		200 MHz, 3.5 pF, 1 M Ω Active Differential Probe, ±20 V	ZD200
** Includes ENET-2CAB-SMA018 and ENET-2ADA-BNCSMA	1	500 MHz, 1.0 pF Active Differential Probe, ±8 V	ZD500
		1 GHz, 1.0 pF Active Differential Probe, ±8 V	ZD1000
Debug Toolkit Options		1.5 GHz, 1.0 pF Active Differential Probe, ±8 V	ZD1500
100Base-T1 and 1000Base-T1 WR8KH	D-AUTO-ENET-TOOLKIT	500 MHz, Active Differential Probe (÷1, ÷10, ÷100)	AP033
Debug Toolkit Automotive Ethernet Breakout Test Fixture for	TF-AUTO-ENET	30 A, 10 MHz Current Probe - AC/DC, 30 Arms, 50 A peak pulse, 3-meter cable	CP030-3M
100Base-T1 and 1000Base-T1 Debug Toolkit	11 7,616 2,121	30 A, 50 MHz Current Probe - AC/DC, 30 Arms, 50 A peak pulse, 1.5-meter cable	CP030
Serial Data Analysis Options		30 A, 50 MHz High Sensitivity Current Probe - AC/DC, 30 Arms, 50 A peak pulse, 1.5-meter cable	CP030A
Serial Data Analysis Software (single-lane eye, jitter and noise measurements)	WR8KHD-SDAIII	30 A, 100 MHz Current Probe - AC/DC, 30 Arms, 50 A peak pulse, 1.5-meter cable	CP031
Eye Doctor II Software (channel & fixture de-embedding/emulation, Tx/Rx equalization)	WR8KHD-EYEDRII	30A, 100 MHz High Sensitivity Current Probe - AC/DC, 30 Arms, 50 A peak pulse, 1.5-meter cable	CP031A
Virtual Probe Software (advanced W	/R8KHD-VIRTUALPROBE	150 A, 10 MHz Current Probe - AC/DC, 150 Arms; 500 A peak pulse, 2-meter cable	CP150
de-embedding, emulation and virtual probing) Serial Data Mask Software	WR8KHD-SDM	150 A, 5 MHz Current Probe -	CP150-6M
Cable De-Embedding Software W	VR8KHD-CBL-DE-EMBED	AC/DC, 150 Arms, 500 A peak pulse, 6-meter cable 500 A, 2 MHz Current Probe	CP500
Power Analysis Options		AC/DC, 500 Arms, 700 A peak pulse, 6-meter cable	DCCOOL
Power Analyzer Software	WR8KHD-PWR	Deskew Calibration Source	DCS025
	R8KHD-DIG-PWR-MGMT	Programmable Current Sensor to ProBus Adapter (for third-party current sensors)	CA10
Jitter Analysis Options		Set of 4 CA10 Programmable Current Sensor to ProBus Adapters (for third-party current sensors)	CA10-QUADPAK
JitKit Software (clock/clock-data jitter analysis	WR8KHD-JITKIT	100:1 400 MHz 50 MΩ 1 kV High-Voltage Probe	HVP120
with statistical, spectral and jitter overlay)	WHORID-SITKIT	100:1 400 MHz 50 M Ω 4 kV High-Voltage Probe	PPE4KV
with statistical, spectral and fitter overlay)		1000:1 400 MHz 50 MΩ 5 kV High-Voltage Probe	PPE5KV
Digital Filtering Ontions		1000:1 400 MHz 5 M Ω / 50 M Ω 6 kV High-Voltage Probe	
<u>Digital Filtering Options</u>	WD0WID DED0	TekProbe to ProBus Probe Adapter	TPA10
Digital Filter Software	WR8KHD-DFP2	Optical-to-Electrical Converter, 500-870 nm ProBus BNC Connector	0E425
Other Software Options	WDOWID FMO	Optical-to-Electrical Converter,	OE455
EMC Pulse Parameter	WR8KHD-EMC	1 IV 25 M Iz High Voltage Differential Probe	LIV/D0100 A
Spectrum Analyzer and Advanced FFT	WR8KHD-SPECTRUM	1 kV, 25 MHz High Voltage Differential Probe	HVD3102A
VectorLinQ Vector Signal Analysis Advanced Customization	WR8KHD-VECTORLINQ WR8KHD-XDEV	1 kV, 25 MHz High Voltage Differential Probe (without tip accessories)	HVD3102A-NOACC
		1 kV, 120 MHz High Voltage Differential Probe	HVD3106A
Remote Control/Network Options	LICDO CDID	1 kV, 120 MHz High Voltage Differential Probe (without tip accessories)	HVD3106A-NOACC
External USB2 to GPIB Adaptor	USB2-GPIB	1 kV, 80 MHz High Voltage Differential Probe - 6-meter Cable and Auto Zero Disconnect	HVD3106A-6M
General Accessories		2 kV, 120 MHz High Voltage Differential Probe	HVD3206A
	WR8KHD-RACKMOUNT OC1024-A	2 kV, 80 MHz High Voltage Differential Probe - 6-meter Cable and Auto Zero Disconnect	HVD3206A-6M
modulinent Cart (with additional Shell and diawel)	00102 4- A	6 kV, 100 MHz High Voltage Differential Probe	HVD3605A
		700 V, 25 MHz High-Voltage Differential Probe (÷10, ÷10	
		7.5 GHz Low Capacitance Passive Probe	PP066
		(÷10, 1 kΩ; ÷20, 500 Ω)	330



Customer Service

Teledyne LeCroy oscilloscopes and probes are designed, built, and tested to ensure high reliability. In the unlikely event you experience difficulties, our digital oscilloscopes are fully warranted for three years and our probes are warranted for one year.

This warranty includes:

- · No charge for return shipping
- · Long-term 7-year support
- Upgrade to latest software at no charge



1-800-5-LeCroy teledynelecroy.com

Local sales offices are located throughout the world. Visit our website to find the most convenient location.